



TOP TIPS FOR LAUNDRY...

-  Always check your care labels
- Never fill the machines above 3/4 full 
-  Check your pockets & the machine first
- Clean the lint filter on the dryer before you use it 

CONTACT US

If you need help or your machine won't start,
Get in touch!



0800 141 2331
washstation.co.uk



LAUNDRY ROOM USER GUIDE

How to use Washnet to do
your laundry.

YOUR GUIDE TO GETTING STARTED...



USING WASHNET



- Go to washnet.co.uk or download the Washnet app from your phones app store.
- Create an account & select your nearest location from the list of laundrettes. Your nearest 3 are geo located!
- You can reserve a machine for up to 10mins from your room. (Do not pay until you are in the laundry room)
- Choose the washer or dryer you'd like to use by selecting start or resume payment.
- Check your care labels and select the correct cycle you want to use and proceed with making the payment.

USING YOUR MACHINES



- Load your machine between 1/4 & 3/4 full. For optimal results we recommend halfway.
- For the Washers, add your detergent directly in to the drum and close the door.
- For the Dryers, make sure you clean the lint filter before and after use.
- The app will tell you to push 'start' or select cycle on the machine. Press this to begin the cycle.
- You will receive a notification or an email when there is 7mins left of the wash cycle.